Step 1. Download the Wicreset program found here: <u>https://www.wic.support/download/</u>

Step 2. Click Windows or Mac depending on which type of computer you have

WIC.	Support ter Reset Utility Support	Live Support OFFLINE			
HOME ARTICLES F	A Q VIDEO TUTORIALS				
Search	Download Free	MIC News			
Categories	Download latest WIC Reset Utility version	Added support for L1110/L3156/L3116/L3168/L5190. 05/19/2019			
Error Codes on LCD (5)	WIC Reset Utility for Windows Download (ZIP, 2.56 mB)	Added support for SP785. 05/15/2019			
F A Q (23) Main (3)	WIC for Linux – Download WIC for Linux – Download	Added support for ST- 3000/5000/7000. 05/12/2019			
Video Tutorials (16)	Want to get Reset Key? You can buy Reset Keys:	Added support for WF- C5790BA/PX-M781F/EP-774A.			
News How to fix Epson 0xF4 error code?	Pay by Visa, Master Card or Scrill – here Pay by PayPal – here	05/07/2019 Added firmware for fixing recovery mode on WF-3640. 04/12/2019			

Step 3. Install the program and save it to your desktop.

Step 4. Once the program opens – Select the printer on the left Tab and click "Read waste counters" button

🚺 WicReset v.3.90.0 Aug 27 2015		
File Reset keys Support Feedback	Help	
Epson L120	>	Control Error List Supported models News FAQ = Waste counters Reset waste counters Read waste counters Reset waste counters = Information Status Report = Cleaning Head cleaning Information
		Ink charge

Step 5. Purchase a reset key available at:

https://www.2manuals.com/product info.php?cPath=56 92&products id=1138&ref=32

EPSON Adjustment Programs » WIC Reset Utility » RESET_KEY						
RESET KEY for the WIC Reset Uility - One Key for	r One Reset					
	1 KEY	2 KEYs	5 KEYs	10 KEYs	25 KEYs	
	\$9.99 Per key	\$8.99 Per key	\$6.99 Per key	\$5.99 Per key	\$3.99 Per key	
		Save: \$2	Save: \$15	Save: \$40	Save: \$150	
	Total: \$9.99	Total: \$17.98	Total: \$34.95	Total: \$59.90	Total: \$99.75	
	Buy	Buy	Buy	Buy	Buy	

Step 6. Purchase a Reset key 1 or 2 keys etc.

Step 7. Click "Reset Waste counters" to insert the reset key which you should have received from your email. And then OK.

MicReset v 3 50 5000	Aug 28 2013				
File Reset keys Support H	eln				
Epson L200	Control Supported mo	odels News			
	Q Search				
	Model	Free	Reset Waste	Read Waste	
× 1	Artisan 1430		Yes	Yes	
	Artisan 50		Yes	Yes	
Wic	Reset		Yes	Yes	
			Yes	Yes	
Enter	reset key here		Yes	Yes	
30BC	A6B4193055E7		Yes	Yes	
	0	L Purton L	Yes	Yes	
	OK Cancel	Buy key	Yes	Yes	
	Arusan 010		Yes	Yes	
	Artisan 830/835		Yes	Yes	-
Refresh detected printers list	Check waste reset k	ey Buy waste rese	t key		
This program can only function properly who	en your computer and printer ar	e connected using a USB cabl	a.		
If you do not see your printer in the detects	ed devices list, please try the fol	owing:			
1. Check USB cable/connection					
2. Cancel all printer jobs					
 Furn the printer off and then on again. After each of the above, the refreshing the 	detected devices list				
Key was created 2013-09-05 15:27:39. This	s key has been used and is no k	inger valid. Requested key wa	s used 2013-09-05 1	5:31:20 to reset Artis	an 830. Client's
network address (IP) during the reset was in	dentified as 176.45.18.142 (SA)	Your current network adress	(IP) identified as 193	3.93.53.123 (UA).	

Step 8. The program will prompt you to power off the printer (in the front)

EPSON 1220 Series	Control Supported models News FAQ	O Support is of Se
Context sets	- Waste counters	
	Read waste counters Reset waste counters Check Reset Key Ink levels	
	- Information	
	Status Report List of supported errors	
	Important!	
	In order to apply all changes made to the printer you turn it off immediately (using the printer power button). Successful reset isn't completed until printer has been powered off and on again. Failure to restart the printer may result in all counters/states returning to their previous settings.	
C Refresh detected printers list	Head ID	

						_				-	_
Plaaca	remember	that fatal	arror is no	t related to	waste	overflow	and it co	uld not b	e recet	hu	coffur?

Your Printer Model	Control Supported models News FAQ Errors reference						
		 Verify key status 					
		38.115/7070-10FLE Verify					
	- Waste counters						
	Read waste counters Reset waste counters						
	= Information						
		Status Report					
		- Cleaning					
	Head cleaning Gentle Cleaning						
	Ink of Wild Benefit It little						
		Testi Congratulations. Your printer's waste counter(s) have now been reset.					
		Once your printer has shutdown, you can then turn it back on and continue to use the printer as normal. Firm Please remember to replace the waste ink pads or fit an external waste ink tank.					
		Click here for more information					
		Close					
	Refresh detected printers list						

Step 9. Make sure that the tray is all the way back before powering on

Step 10. Power on in the front and the printer pads have been serviced and reset.