



PowerCleaning Flush System Instructions For Cleaning Removable Canon Printheads

Made in the USA / Use Only As Directed

Included: flush system, cleaning fluid, soaking jar, cleaning cloth, tweezers, gloves

What else is needed: Water faucet with standard threaded nozzle, cotton swab, paper towel.

Instructions:

Open your printer, remove the ink cartridges and seal them using the original orange clips; or if you don't have the orange clips any more you can temporarily store the cartridges in a sealed plastic bag.

Remove the printhead (the box like portion) by first raising the bar which holds the printhead in place then gently lifting the printhead up and forward. To the right is what a typical printhead looks like (yours may be slightly different depending on printer model).



Place the printhead on a paper towel or soft cloth and gently remove the round black seals (indicated by the red arrows in the picture) at each cartridge nozzle contact spot with the tweezers.

Place the seals in the jar filled half way with cleaning solution to soak in order to remove any ink residue.

On the printhead, you will notice 3 or 4 smaller nozzle contact spots (indicated with the number #1 in the diagram). There is also a larger nozzle contact spot indicated with the number #0. Using a cotton swab or soft cloth, apply a small amount of cleaning solution to each contact spot and let soak for 3 minutes.

Attach the flush tool to the nozzle of your faucet, turning the attachment firmly to avoid leaking.

One at a time, attach the flush tool to the smaller nozzle contact spots (#1) and by using the expander to the larger black nozzle contact spot (#0) by gently twisting in place over the contact stop until no excess water leaks then flush warm water through the nozzles until the spray is full and even with a crisp and strong flow.

After flushing out your printhead let it dry thoroughly before reinserting it to your printer and replacing the ink cartridges back into their correct position inside the printer.